


Key, refer to page 3.4/1 – (N 07)

Dual-circuit hydraulic brake system

.T  
43.4

3.2/1

3.2/1A

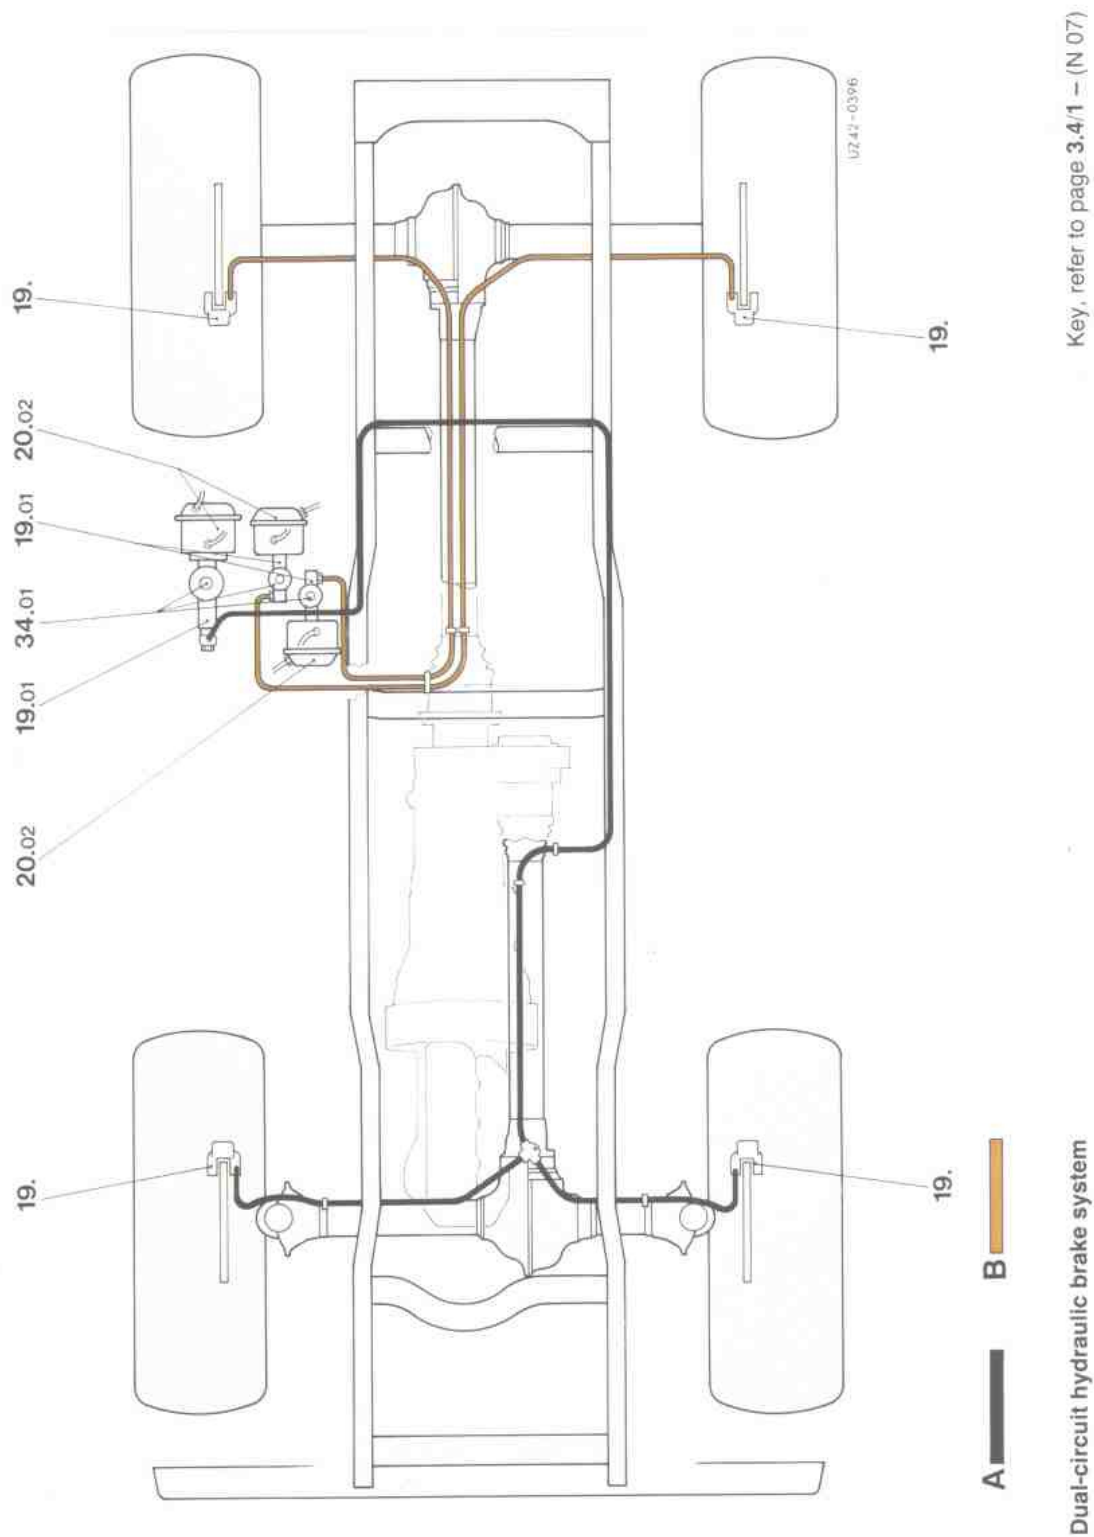


Key, refer to page 3.4/1 – (N 07)

### Dual-circuit hydraulic brake system

43.4

32/212

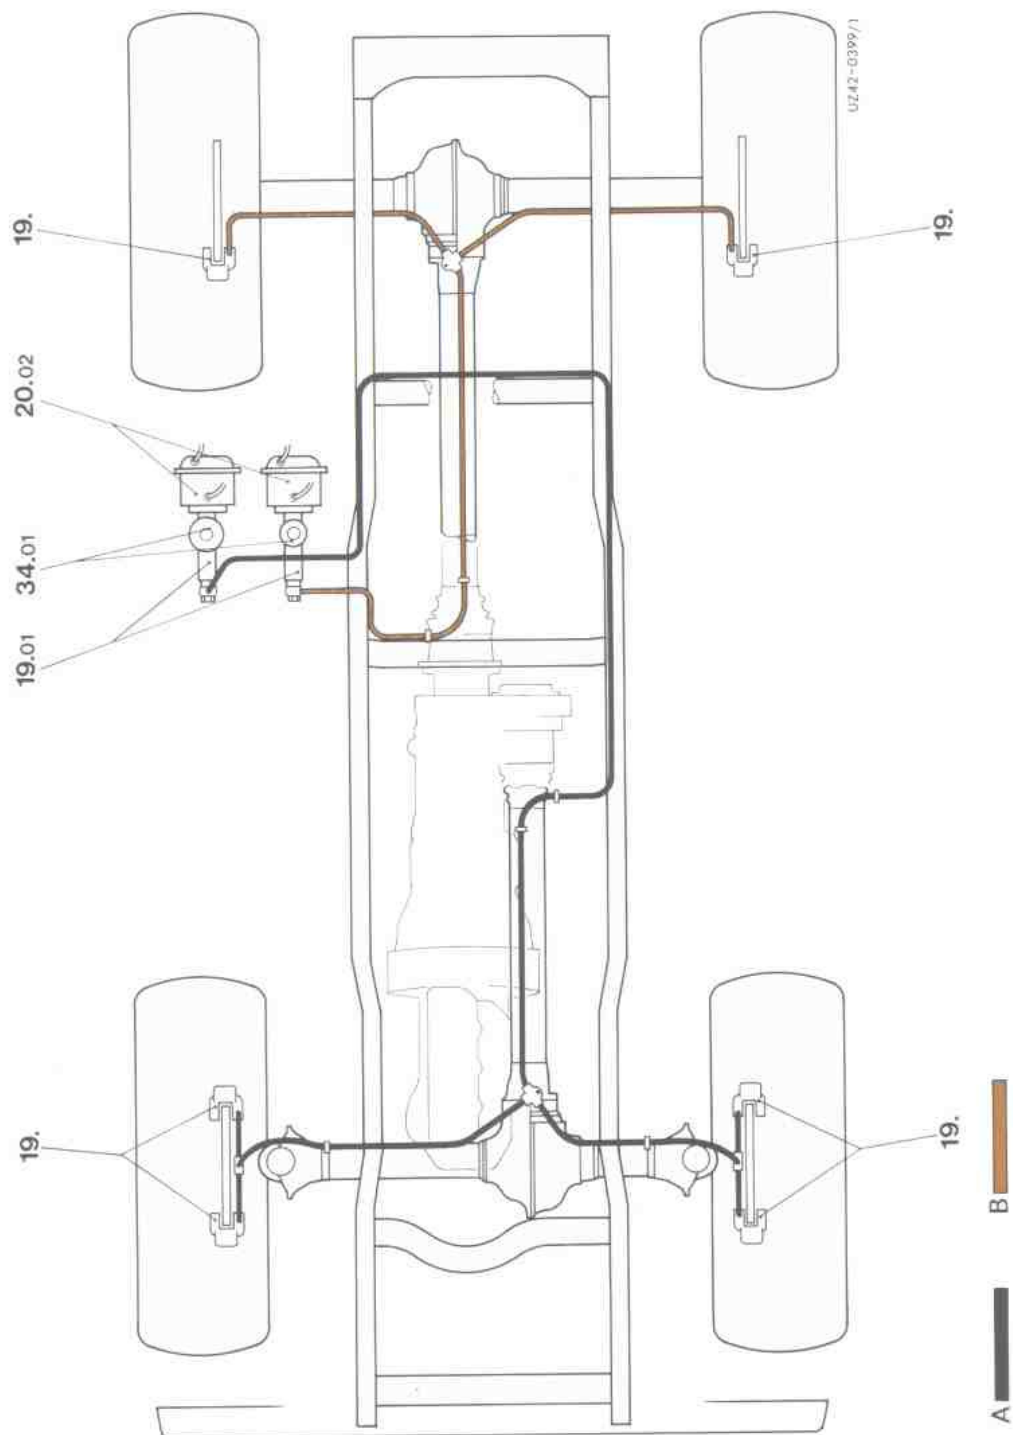


Key, refer to page 3.4/1 – (N.07)

### Dual-circuit hydraulic brake system


43.4

3.2/3  
3.2/3

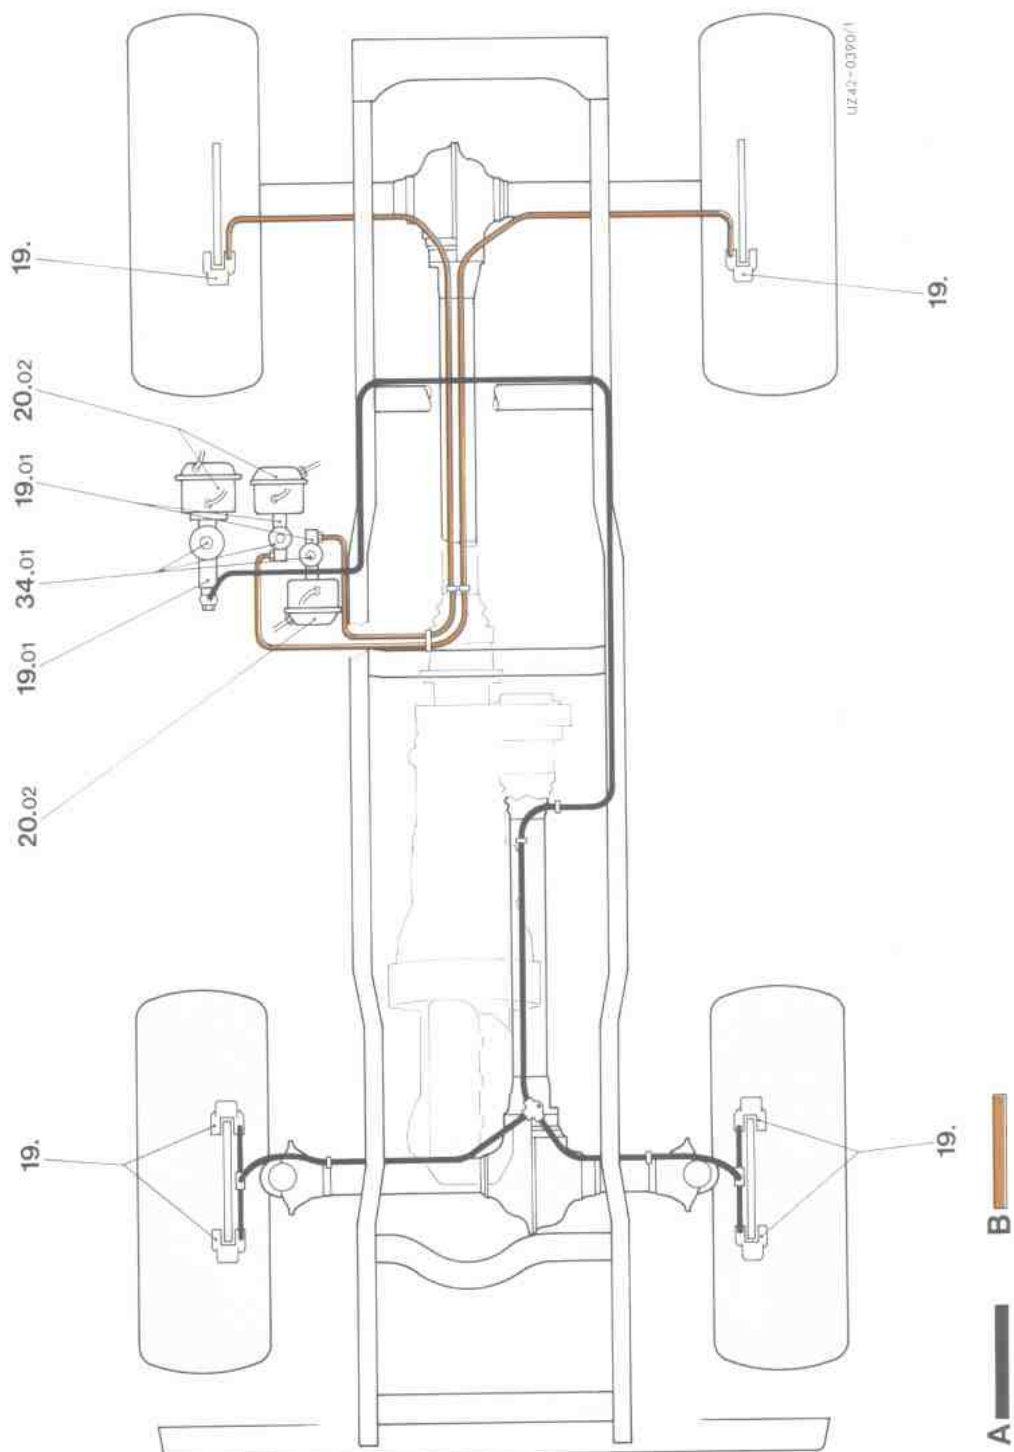

43.4

3.2/4  
3.214

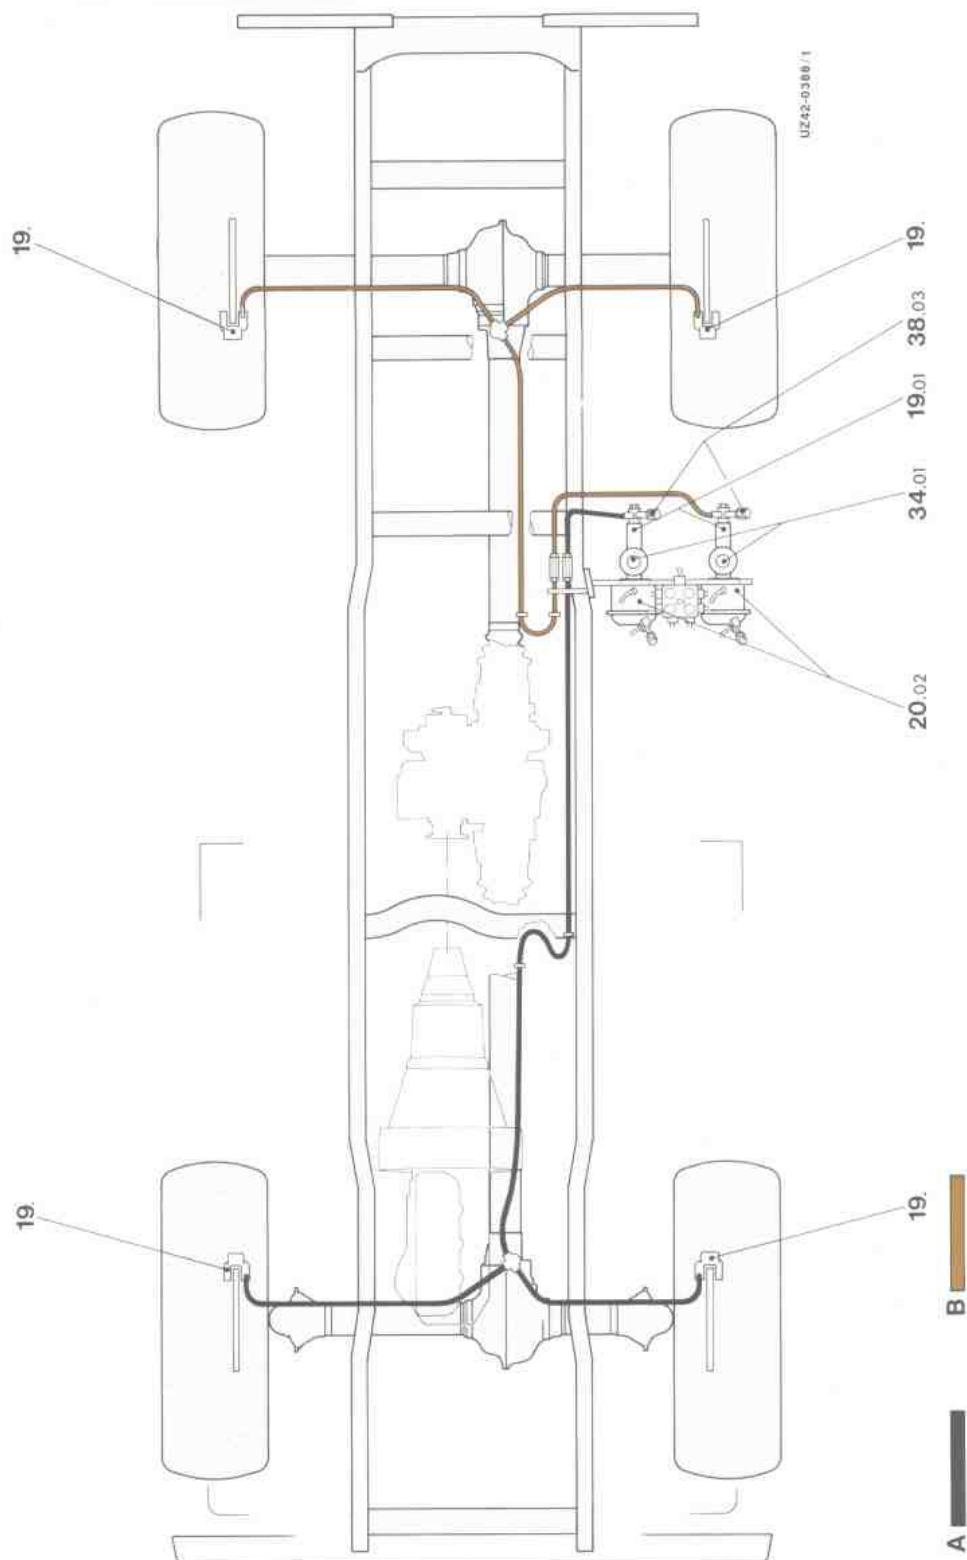


Key, refer to page 3.4/1 – (N 07)

Dual-circuit hydraulic brake system

T  
43.4

3.2/5


3.2/5

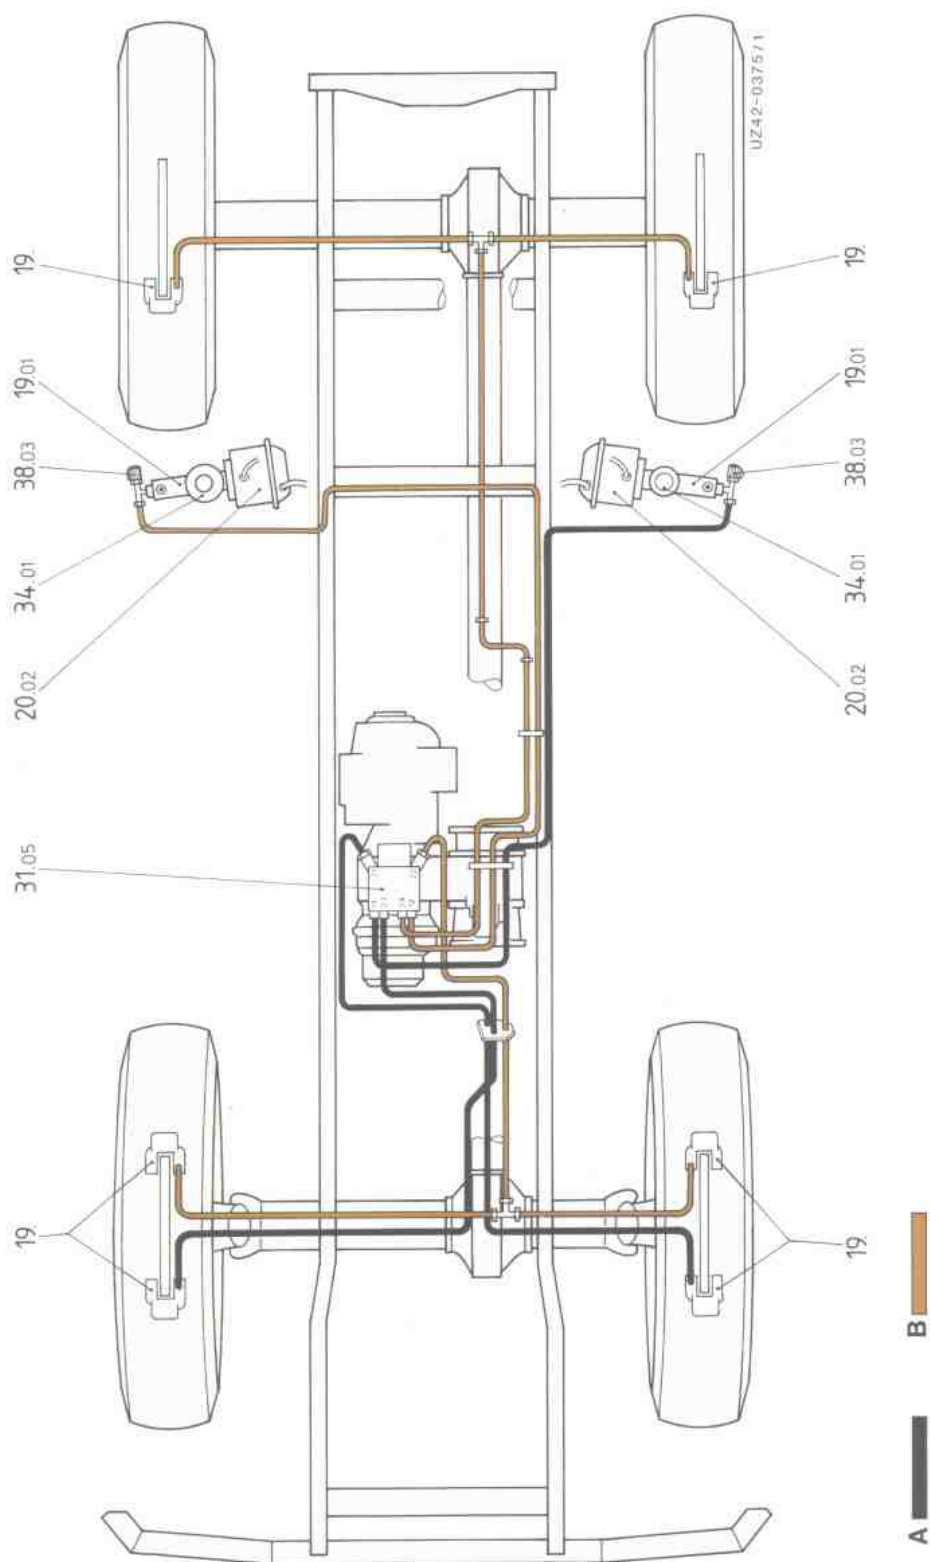

Key, refer to page 3.4/1 – (N 07)

Dual-circuit hydraulic brake system

T  
43.43.2/6  
3.2/6

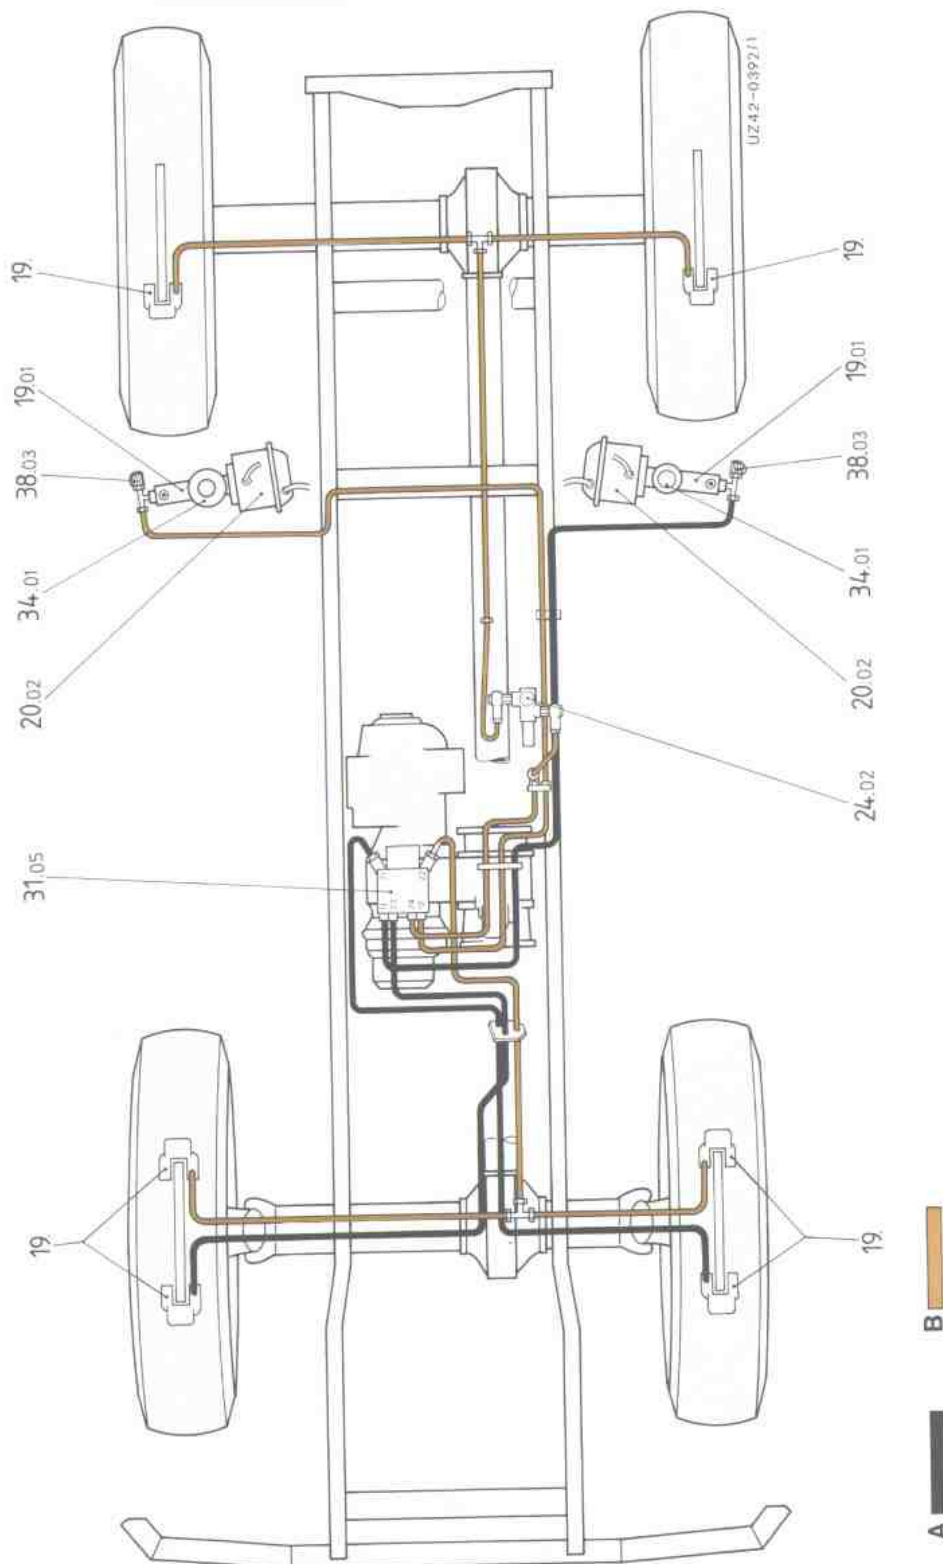


Key, refer to page 3.4/1 – (N 07)

Dual-circuit hydraulic brake system

.T  
43.4

3.2/7

3.2/7

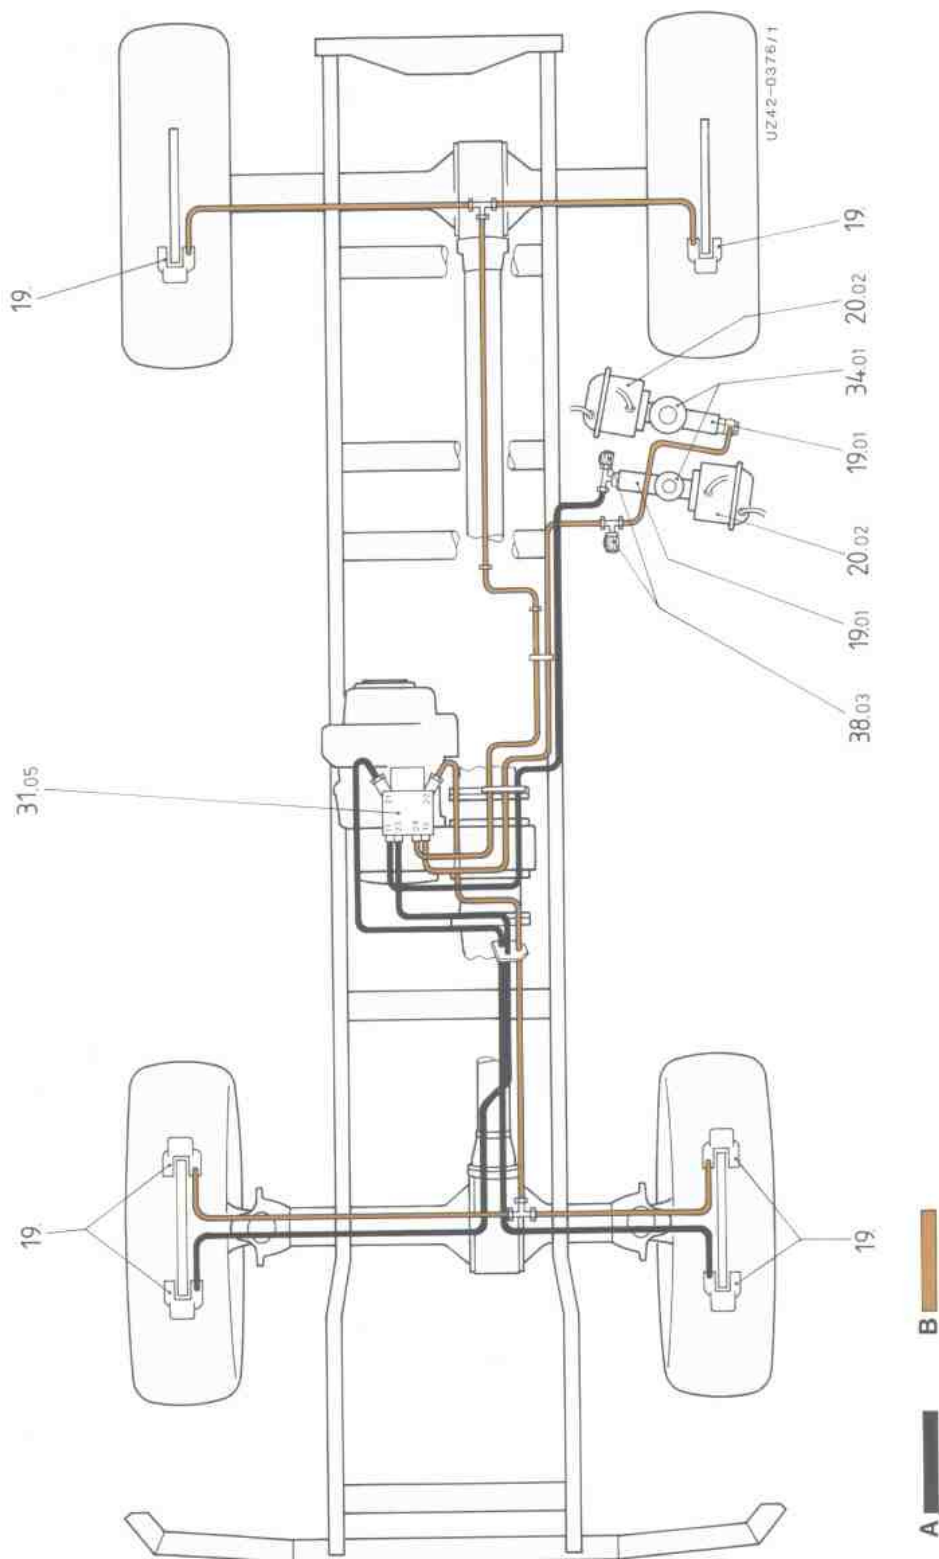


Key, refer to page 3.4/1 – (N 07)

Dual-circuit hydraulic brake system

.T  
43.43.2/8  
3.2/8



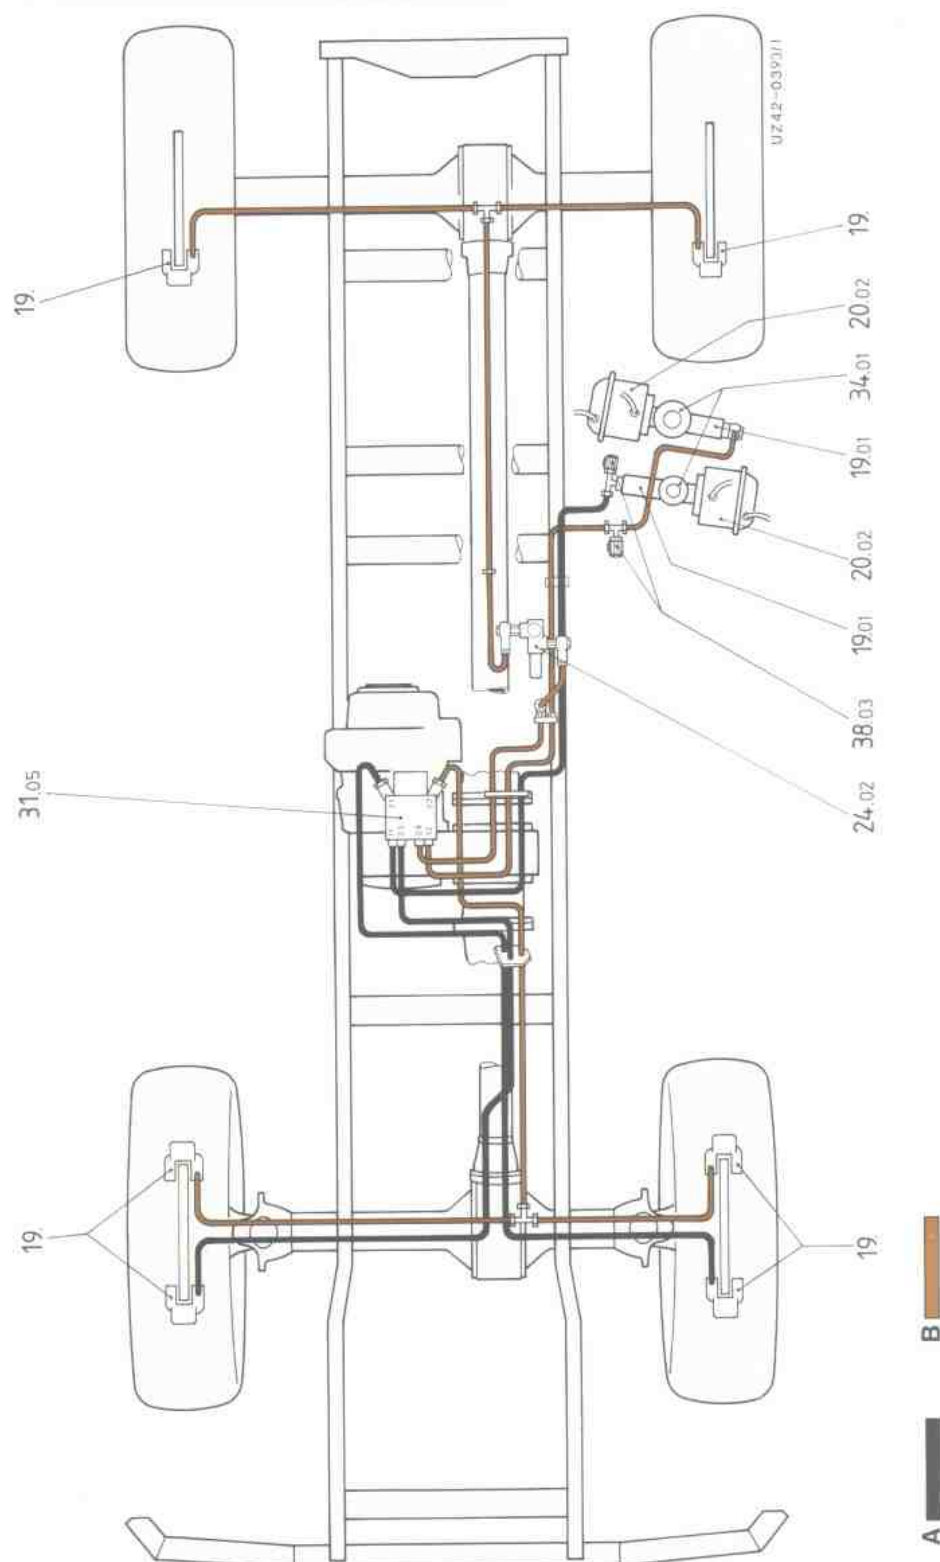


Key, refer to page 3.4/1 – (N 07)

### Dual-circuit hydraulic brake system

43.4

3.2/9  
3.2/9

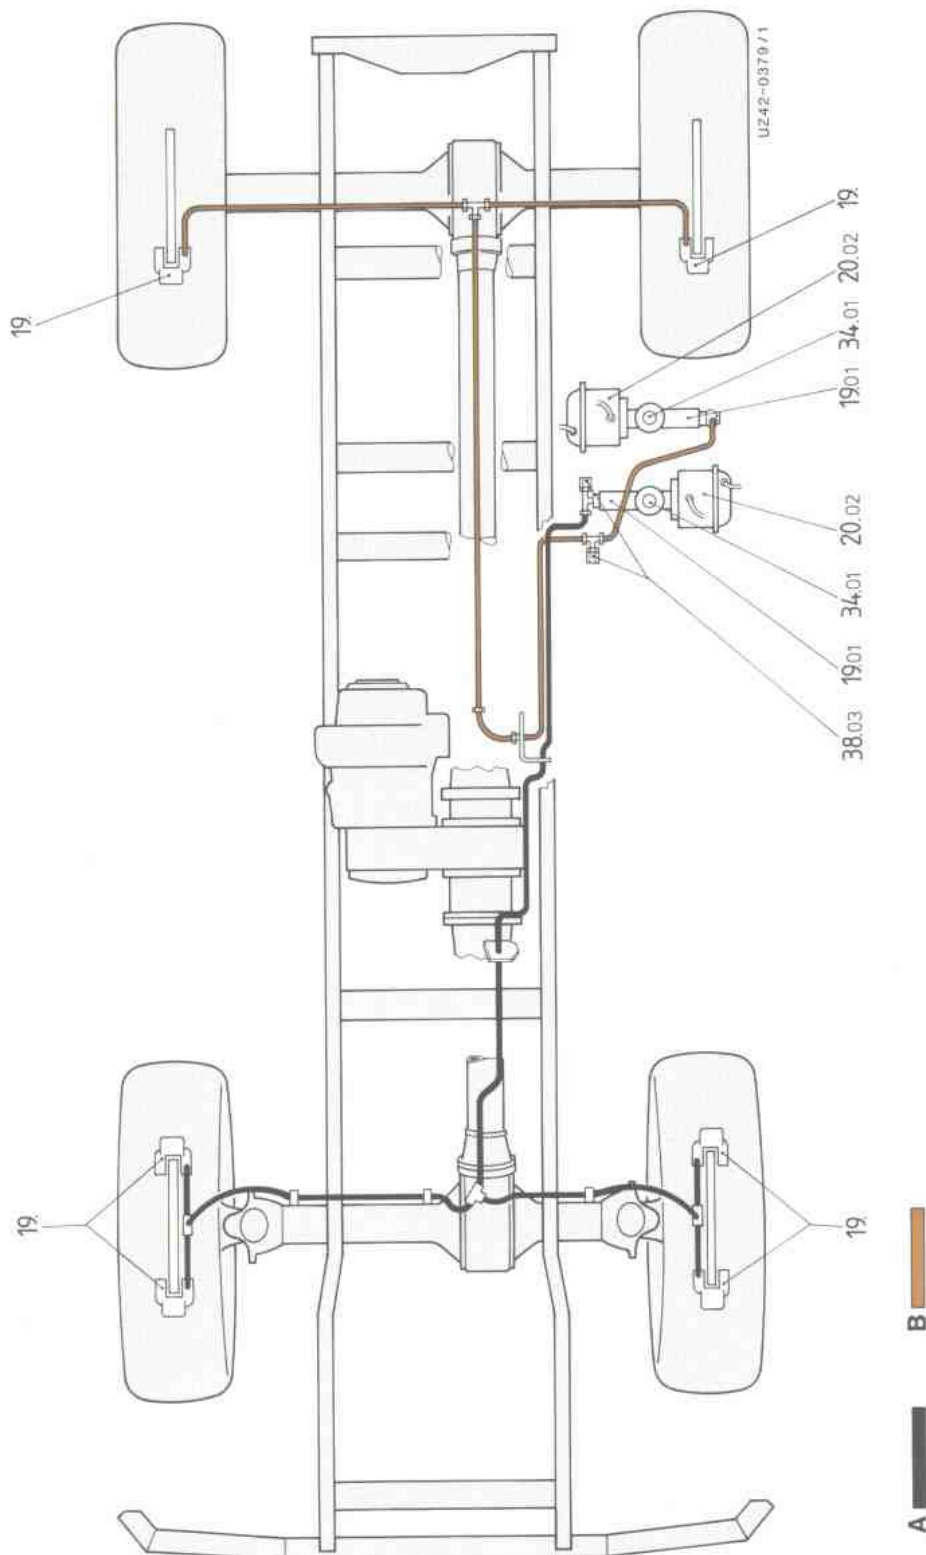


Key, refer to page 3.4/1 – (N 07)

Dual-circuit hydraulic brake system

.T  
43.43.2/10  
3.2/10

Unimog 437 with ABS

Unimog 437 with SA 36 700

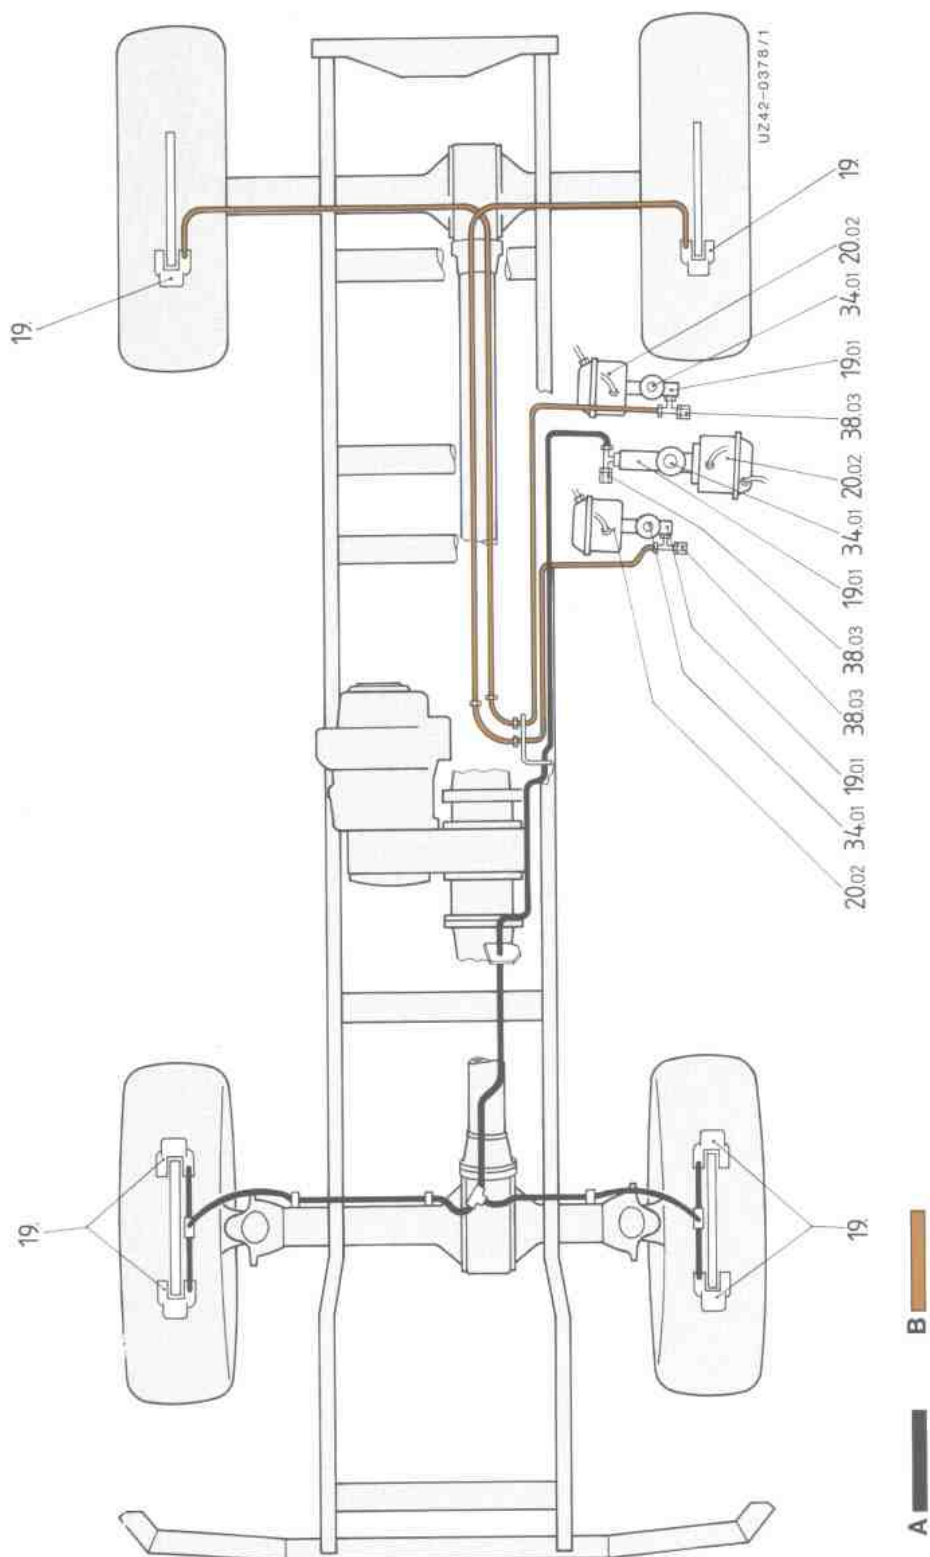

Dual-circuit hydraulic brake system

.T  
43.43.2/11  
3.2/11