

temperatures below 0° C

Additional temperatures, it will be of advantage to... back to idle position after stopping the water pump.

With a "start pilot" to facilitate starting the engine at low temperatures.

For operation, fill container with starting fuel, open... Remove protective cap of filling cylinder and push... filling valve of container. Close container and pump...

Simultaneously "start pilot" until the engine is running and...


Applied only in filling cylinders which are available at... Stations. Use original filling cylinders!

Highly inflammable and should not be exposed to temperatures... extended periods. For this reason, remove filling cylinder from... warm season, store in cool surroundings and protect against...

MAINTENANCE INSTRUCTIONS

to maintain the operational... your vehicle and to up... flight to warranty claims, which we deem absolutely... must be carried out... and on time.

Maintenance intervals have... established according to... of operation. Maintenance... can be applied to UNIMOG... which are worked mainly... and without implements.

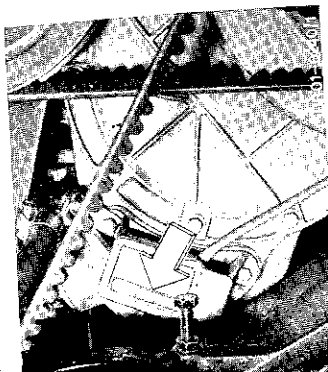

Operating hour counter at front of engine

Perform all maintenance jobs in accordance with specified maintenance intervals.

Maintenance chart		Maintenance intervals	
D	Inspection	Operat. hours	50
		km	1000
P	Service	Operat. hours	300
		km	1000
W	Maintenance	Operat. hours	600
		km	20000
P	Service	Operat. hours	900
		km	30000
W + Z	Maintenance plus additional jobs	Operat. hours	1200
		km	40000
			2700
			1500
			3000
			1800
			6000
			20000
			3300
			2100
			70000
			110000
			3600
			2400
			80000
			120000

This maintenance chart is only for vehicles which have an operating hour counter with red figures (formerly white figures).